




www.herbish.co.za

Operation of the grease trap

A grease trap separates oil and grease from the flow of wastewater by slowing it down and allowing it to cool and float to the surface.


Failure to install a grease trap will result in blockages of the outlet pipes and costly pipe replacements.

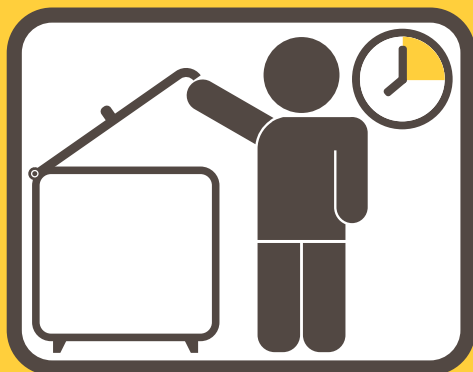


1. At regular intervals open the grease trap.



2. Remove the inlet catch basket(s) and dispose of the solids in the waste bin.

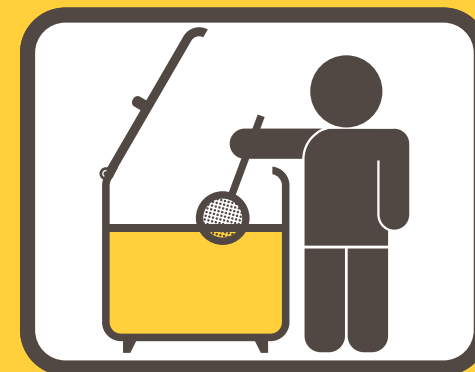


3. Skim the separated grease by using a fine strainer.

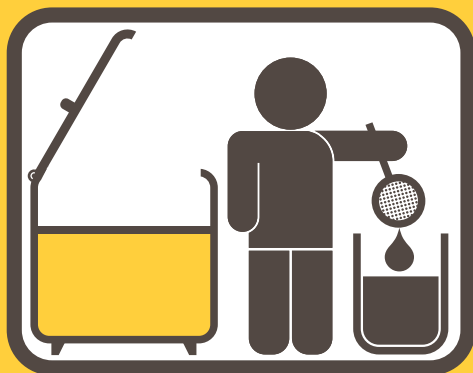


4. Place collected waste in a sealed container for recycling or disposal by authorized contractors.



5. Over a length of time the grease trap will collect sediments on the bottom. Drain liquid and dispose of waste (see 2 above).

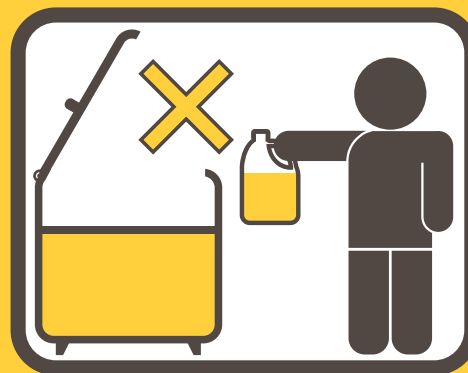

6. Do not use detergents in the grease trap.

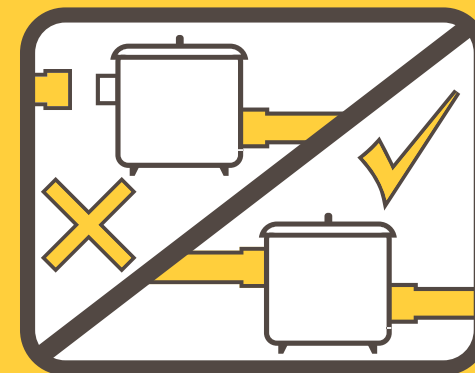

7. Do not disconnect the grease trap and clean directly into the sewer line. This will cause serious blockages.