


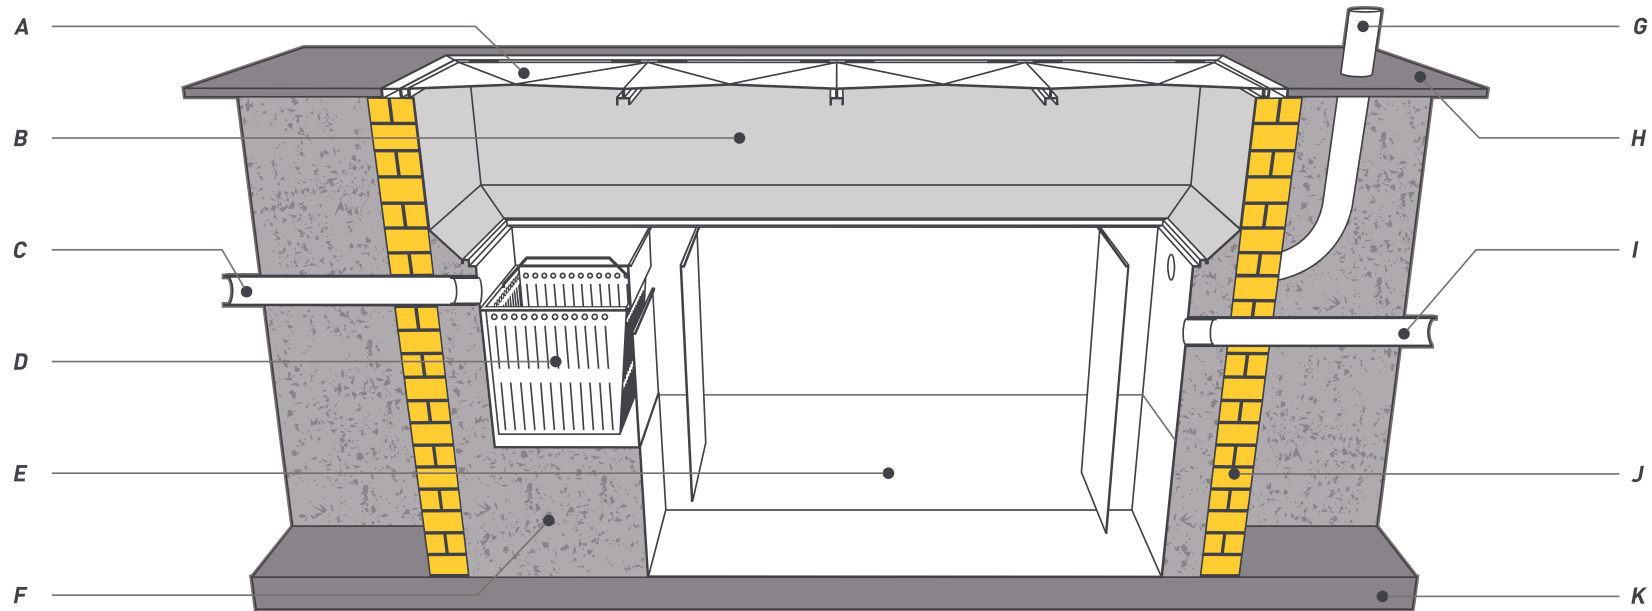

- | | | | | | |
|------------------------|---------------------|---------------------------|-------------------------------|----------------------|------------------------|
| A Lid & Frame | C Inlet Pipe | E Grease Trap Body | G Vent Pipe | I Outlet Pipe | K Concrete Base |
| B Concrete Work | D Baskets | F Sand Fill | H Finished Floor Level | J Brick Work | |

GREASE TRAP INSTALLATION GUIDE

1. Foundation and Placement

Prepare the excavation site and pour a level, solid Concrete Base (K). Once the base has adequately cured, carefully position the Grease Trap Body (E) in the center of the installation area.

2. Enclosure and Brickwork

Construct the surrounding Brick Work (J) directly on the concrete base. This forms the structural walls of the underground pit that houses the trap body.

3. Plumbing Connections

Connect the necessary piping to the grease trap. Attach the Inlet Pipe (C) so that wastewater flows directly into the basket area. Connect the Outlet Pipe (I) for effluent discharge, and install the Vent Pipe (G) to allow gases to escape and ensure proper flow dynamics.

4. Structural Backfill

Pack Sand Fill (F) into the voids beneath the inlet shelf of the grease trap body. This provides crucial structural support and prevents the trap from shifting or cracking under pressure.

5. Internal Assembly

Lower the internal filter Baskets (D) into their designated track within the grease trap body, positioned just below the inlet pipe to catch solid waste.

6. Upper Concrete Pour

Apply the upper Concrete Work (B) around the top of the brickwork and trap body opening. Slope and smooth this concrete so that it builds the structure up to your anticipated Finished Floor Level (H).

7. Install Lid and Frame

Finally, set the Lid & Frame (A) into the wet upper concrete work. Ensure the top of the frame sits perfectly flush with the finished floor level to provide a seamless, trip-free surface and allow easy maintenance access.